


EPECON

UNDER PRO

INSTALLATIONSMANUAL

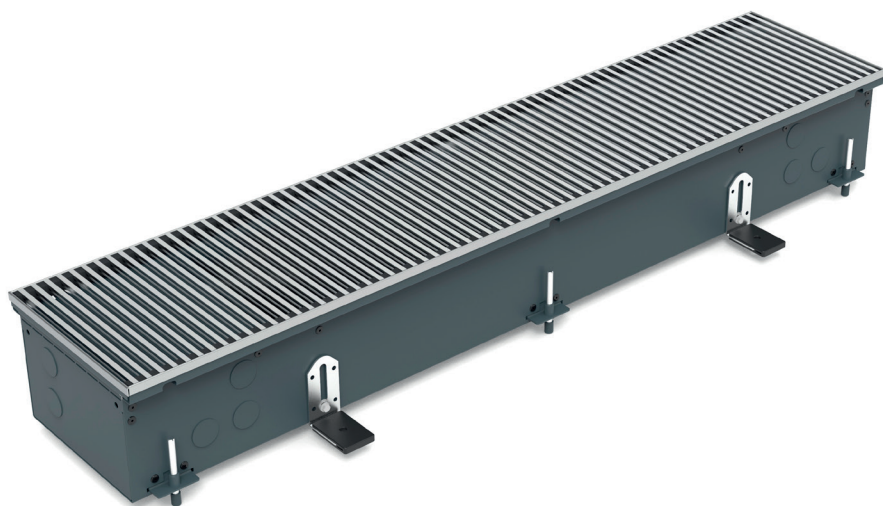

INNEHÅLL

1. PRODUKTBESKRIVNING (SV).....	2
2. MÅTT (SV).....	3
3. INSTALLATION (SV).....	3
4. GARANTIVILLKOR (EN).....	7



Viktig information


Produkten måste installeras av fackman i enighet med installationsanvisningen och enligt lokala regelverk. Följ installationsanvisningen och spara den på säker plats. Produkten måste alltid vara tillgänglig för underhåll och inspektion.

Garantin gäller inte om:

- Installation, underhåll- eller driftsinformationen i denna manual inte efterlevs.
- Modifieringar av produkten har skett före, under eller efter installationen.
- Underhåll har skett på felaktigt sätt.
- Åtkomst av produkten har förhindrats pga förutsättningar på plats.


Epecons generella garantivillkor finns att läsa på www.epecon.se/dokument

1. PRODUKTBESKRIVNING

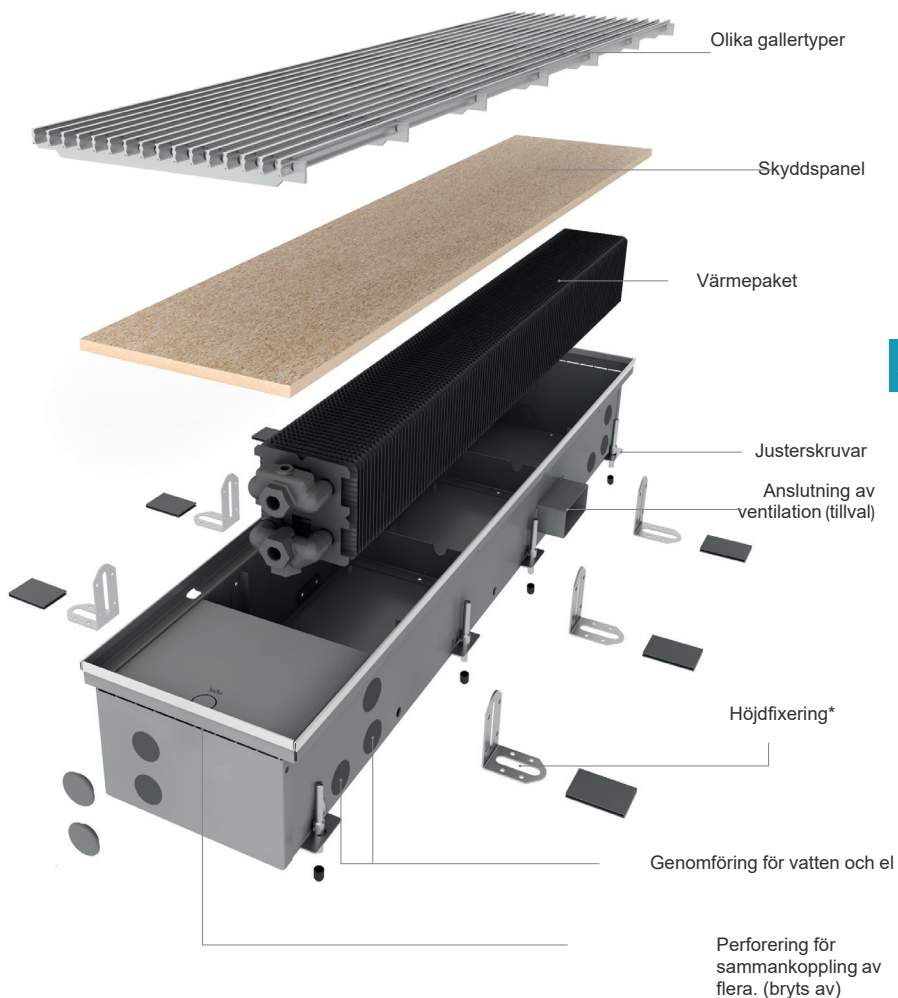


* Vinklarna för höjdfixering har medföljande skruvar som ger justermöjlighet mellan 0-4,5cm .

2. Mått

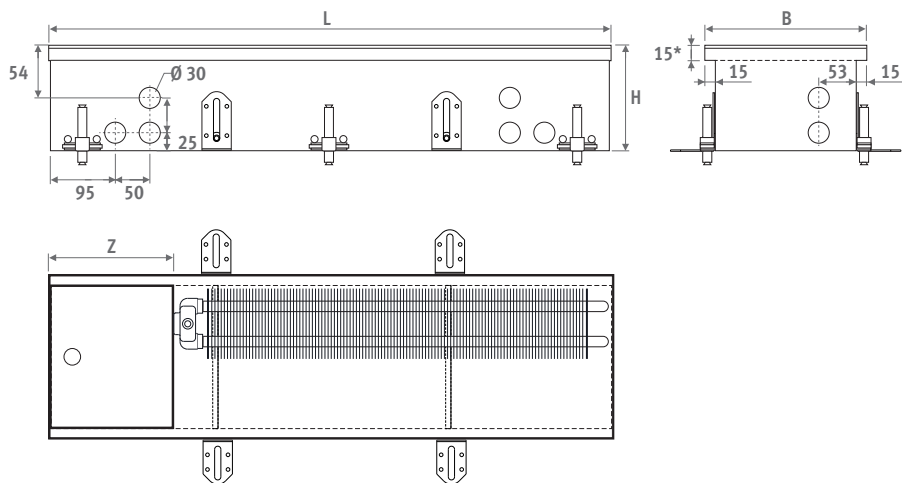


Höjd (H)	Bredd (B)				
90	140	180	230	300	380
120					
150					
200					


3. INSTALLATION

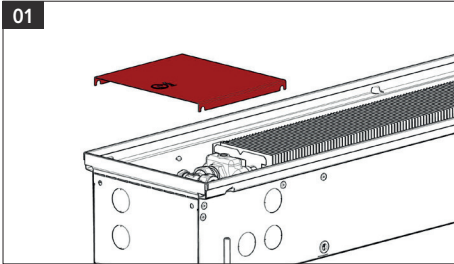


Ta bort täckplattan för ventilerna innan installationen.

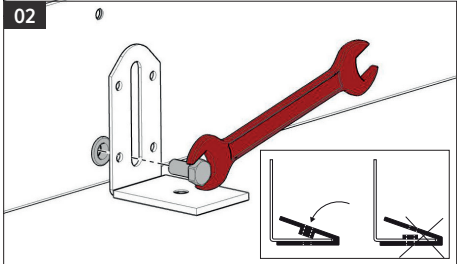

Skruva i höjdfixeringen i lådan. Dra inte hårt.

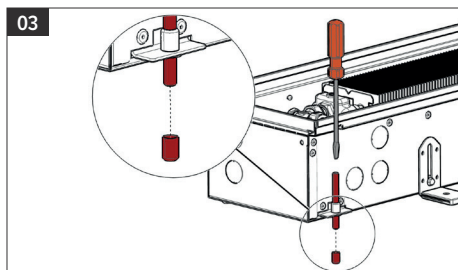


Skruva i justerskruvarna, de förses med en plasthatt. Skruvarna ska sitta på lådans utsida.

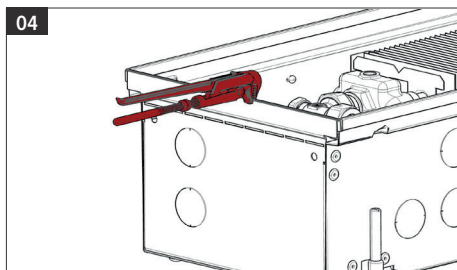


Kontinuerligt montage: Bryt av gavelns topp på lådan så att gallret kan fortsätta över lådans ände.

⚠ Gäller bara den gavel som ligger mot en annan Under Pro

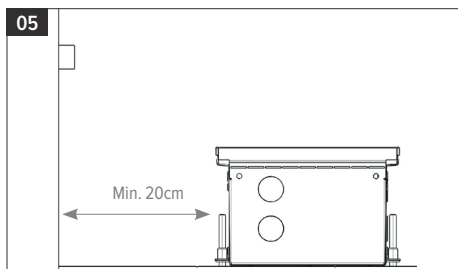


⚠ Installera produkten med värmepaketet mot fasad.
⚠ Gardiner mot golvet: Placera produkten minst 20cm från fönstret

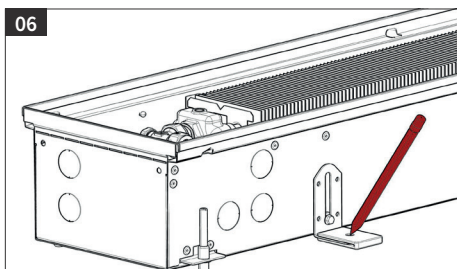


Fixera den i golvet.

⚠ Använd rätt plugg/expander för golvtypen.

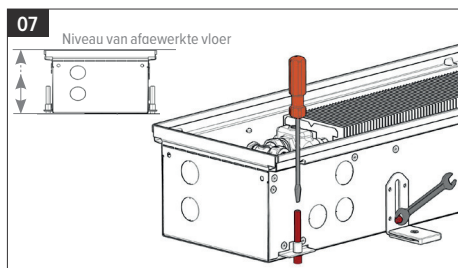


Använd justerskruvarna för att hitta rätt höjd.
⚠ Se till att ovankant är i samma nivå som färdigt golv

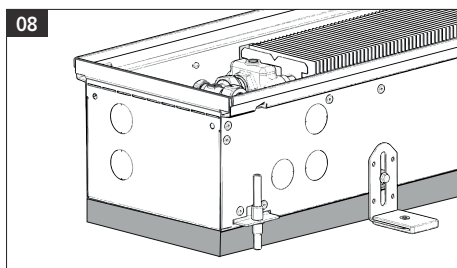


⚠ Om produkten inte monteras direkt mot golvet måste utrymmet under fyllas ut för stabilitet.

SV

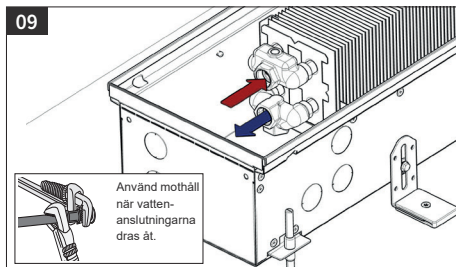


Vattenanslutningar: Vi rekommenderar att flexibla slangar används för att underlätta underhåll.

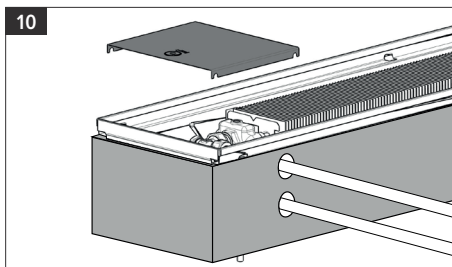


Ta bort skyddsfilmen och montera skyddsplåten.


⚠ Om produkten gjuts in ska den förses med flexibel isolering runt om för att skydda mot mekanisk påverkan.

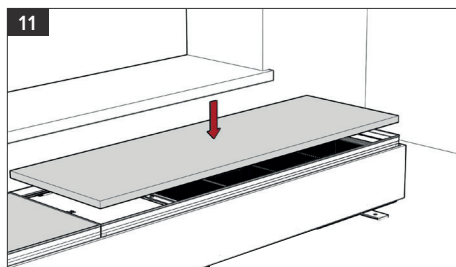

Täck konvektorn med skyddsplast och skyddsskivan.

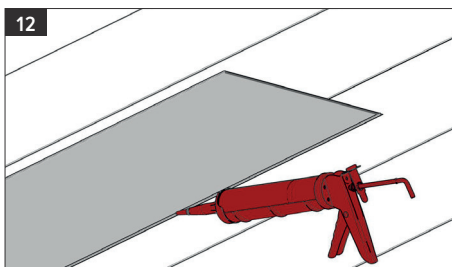

Lägg golvet och avsluta eventuellt med mjukfog.

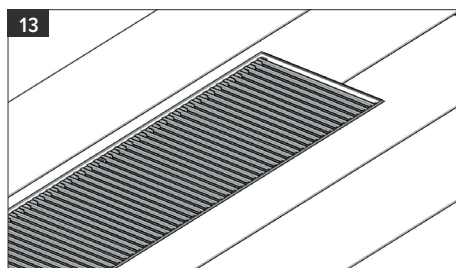

Installera gallret.

4. WARRANTY CONDITIONS

1. the guarantee is valid only if the equipment is properly and correctly used, by its first owner and if installed in accordance with the norms and instructions as stipulated in the instruction leaflet and the current practices..
2. the guarantee only applies to the equipment and the spare parts. Jaga has the choice between repair and replacement of the equipment or the spare parts. If there has been a change in the model, Jaga is authorised to replace the guaranteed equipment with an equivalent equipment or equivalent spare parts. In those cases where the guarantee claim is received, during the first six months after the start of the guarantee, on all labour and transport costs..
3. the period of guarantee is mentioned in this certificate. A repair or replacement does not change anything to the original period of guarantee..
4. No guarantee is granted on equipment or spare parts lacking information concerning type or series, or on equipment where this informations has been removed or altered, or on equipment that has been repaired or modified by persons not authorized by Jaga..
5. the customer is responsible for the damage when it is due to errors of placement, fittings, electrical connections, faulty or damaged electrical installations or appliances, erroneous voltage or hydronic pressure and all other errors not related to the product delivered by Jaga. the guarantee is also revoked when non-suited parts are applied. the guarantee for our heat exchangers is not valid if they are emptied at set times or during a certain period, or if they are heated by means of industrial water, steam or water saturated by great quantities of oxygen. the quality of the system water has to be in accordance with the VDI 2035-2 directive. the buyer will make every effort to prevent damage to the device by avoiding both dust and moisture. this means that the customer has to cover the device in case of further construction works in order to ensure that the devices remain dust-free. the guarantee is also revoked when the heat exchangers are placed in aggressive surroundings (ammonia, corrosive substances, etc). In these circumstances, the buyer should address the cause of the damage. Lacquered radiators should not be used in the following (humid) areas: above a bath with a built-in shower unit, in a shower cubical or next to it, in a swimming pool (chlorine) or in a sauna..
6. Jaga does not give a guarantee on faulty equipment due to incorrect handling and/or use of the equipment, the dropping of the equipment or the transport without the necessary precautions, or for all equipment that is built in, in a way that it cannot be reached normally. the guarantee is valid only if the equipment is properly and correctly used, by its first owner and if installed in accordance with the norms and instructions as stipulated in the instruction leaflet and the current practices..
7. In all cases where the guarantee is granted but where the intervention occurs later than 6 months after the start of the guarantee, and in all other cases, labour and transportation costs are calculated according to scales set by Jaga. Customers can get information on those scales either from our sales administration personnel, or from the maintenance engineer..
8. All interventions not covered by the guarantee have to be paid in cash to the maintenance engineer..
9. the guarantee starts on the date of the invoice. If the invoice is not available, the serial number or the date of production prevails..
10. Only the courts of judicial district Hasselt (belgium) are authorised to deal with disputes arising from this guarantee. It will apply belgian law even when sales involved are subjects of EU member states as well as non-EU member countries..

SV